



Wishlantern.co.uk

Light up the night sky with a wish

Thank you for your purchase. Please see below some information that you should read prior to deployment of your Wishlantern.

Launching Instructions

- Check wind direction and ensure there are no obstacles in the way of the intended balloon flight.
- Hold the top and fully open out the lantern ensuring the sides are not creased and light the corners of the fuel cell.
- After about 45 seconds the lantern will feel lighter as it fills with warm air and will gradually rise. Do not attempt to throw it up into the air, just guide it and let it go by itself.

Safety Information

Your lantern is completely safe, however, like anything that includes a naked flame there are safety procedures that should be followed.

- Unpack lanterns in a safe environment, away from any sources of ignition, take care not to tear the delicate paper.
- Wear gloves and flame retardant clothing.
- Always keep water or fire extinguishers nearby.
- Children in the launch area must be kept under strict supervision and not left unattended with the lanterns.
- No persons under the influence of alcohol should be involved in the handling or igniting of the lanterns.
- Never smoke while handling the lanterns.
- Check wind speed and ensure that the wind is not stronger than 5 mph.
- Check wind direction and ensure that the flight path is clear and lanterns will not drift into buildings or trees.
- Do not release within five miles of an airport.
- Do not release next to roads or dry standing crops.
- Never tether lanterns as this often prevents the unit from remaining upright as the wind blows, causing the casing to ignite.
- Lanterns are safe when used correctly but are not toys and should not be used by children.

For more information or to place another lantern order please visit www.wishlantern.co.uk or call 0845 500 1215
Wish Lantern accepts no responsibility for any damage or injury howsoever caused resulting from the use of this product.